

Device Search (e.g CX-BK33)


Search

[Service Manuals](#) | [Lg](#) | [Air Conditioner](#) | LS-D2462HL

👁 LS-D2462HL — LG Air Conditioner Service Manual (repair manual)

[Log in](#) [Register](#) [Contact](#) [FAQ](#)Select Language ▼ Translate

🔍 View Screenshot

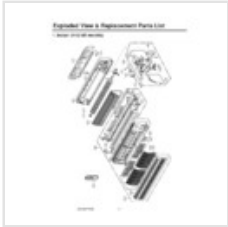


Model: LS-D2462HL
Pages: 127
Size: 2.74 MB
Type: PDF
Document: Service Manual
Brand: LG
Device: Air Conditioner
File: ls-d2462hl.zip
Date: 2018-11-20

[PREV: LG LS-D2461HL Service Manual](#)[View LG LS-D2462HL Service Manual online](#)

Exploded View & Replacement Parts List

1. Indoor Unit(18K models)



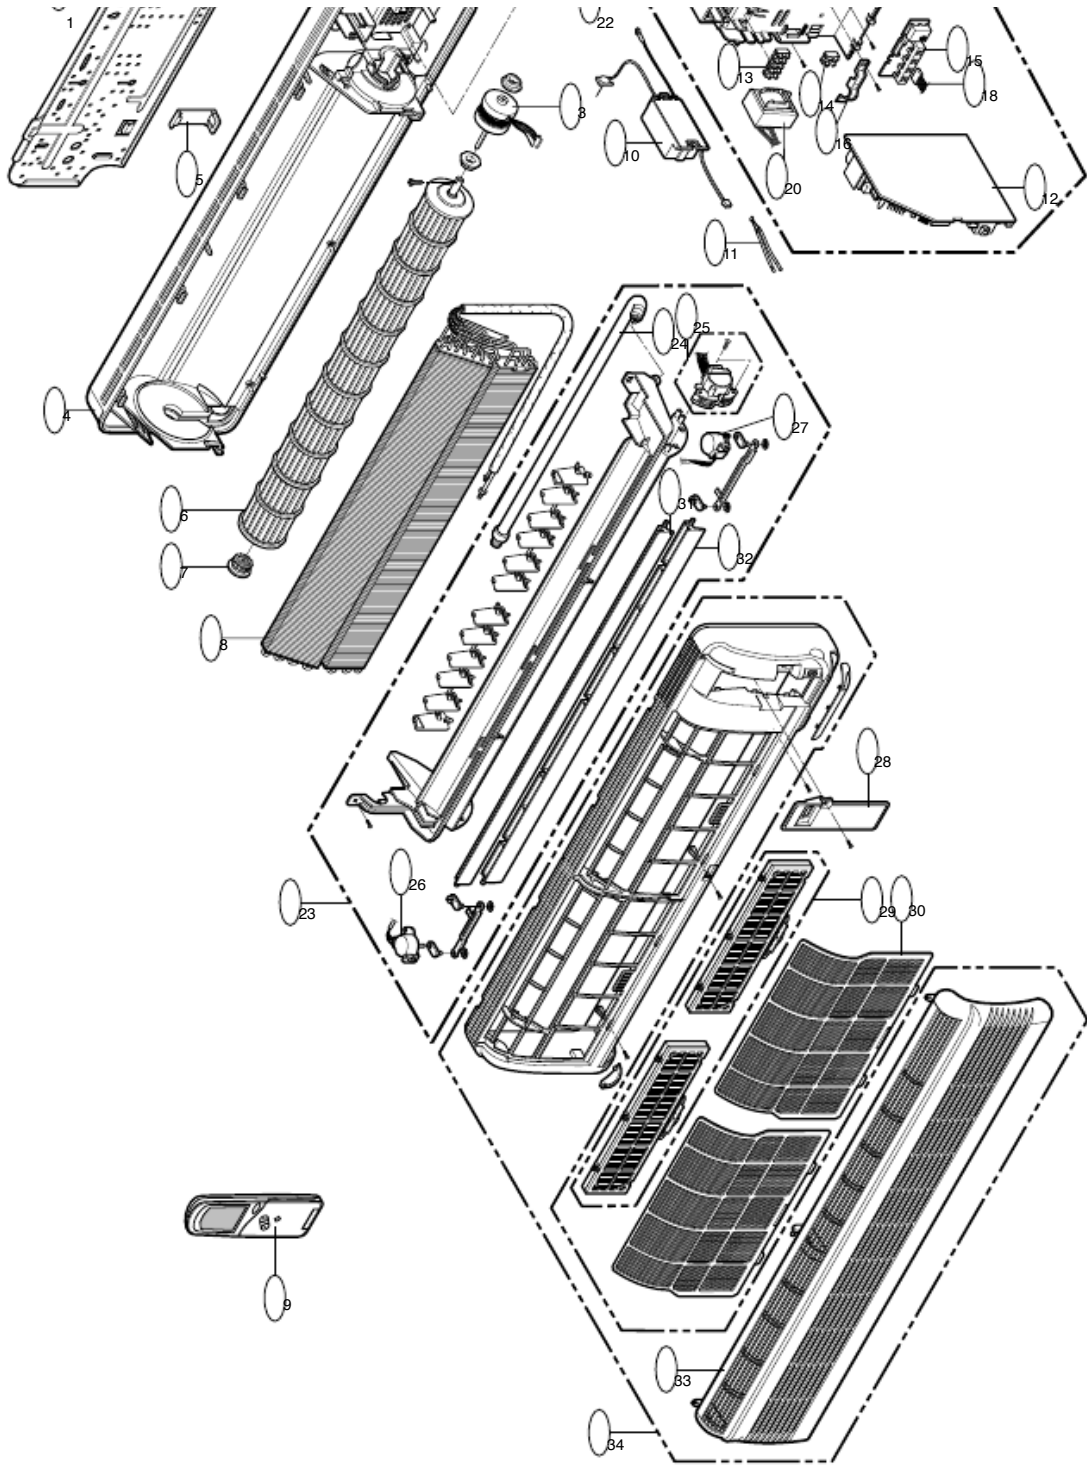

3828AR7190S

- 1 -

LS-D1862CD (Indoor Unit)

LOCATION NO.	No.	DESCRIPTION	PART No.	Q'TY	REMARKS
733010	1	PLATE ASSY, INSTALL	1H00843A	1	
149303	2	HOLDER TUBING	4930AR3309A	1	
346811	3	MOTOR ASSY, AC	4681AR2991B	1	
131410	4	CHASSIS ASSY	3141AR2393A	1	
	5	COVER TUBE	3H03652A	1	
359011	6	FAN ASSY, CROSS FLOW	5901AR2351E	1	
342800	7	BEARING	3H02821A	1	
354212	8	EVAPORATOR ASSY, FINAL	5421AR2464E	1	
W6711	9	REMOTE CONTROLLER ASSY	6711AR2664S	1	
			6711AR2853	-	
			6711AR2852	-	
266090	10	H.V ASSY	2Q01026C	-	
263230	11	THERMISTOR ASSY	6323AQ2333A	1	
268714	12	PWB(PCB) ASSY, MAIN	6871AQ2362C	1	
W6640	13	TERMINAL BLOCK	4H03048H	1	
W6640-1	14	TERMINAL BLOCK	4H03048K	1	
268712	15	PWB(PCB) ASSY, DISPLAY	6871AQ3029C	-	
			6871AQ3149A	1	
	16	CLAMP CORD	4H01051A	1	
			4H02958	-	
249940	17	CONTROL BOX, INDOOR	4994AR1513A	1	
268770	18	LEAD WIRE ASSY	6877AQ3207A	1	
261704	20	TRANSFORMER, POWER	6171AQ2147B	1	
264110	21	POWER CORD ASSY	3H02255Y	1	
			3H03462	-	
249951	22	CONTROL BOX ASSY, INDOOR	4781AR6040K	1	
135311	23	GRILLE ASSY, DISCHARGE	5009AR1176	-	
			5009AR1385B	1	
352150	24	HOSE ASSY DRAIN (INDOOR)	5250AR2044C	1	
	25	GEAR CASE ASSY	3H03716A	1	
146811	26	MOTOR ASSY, STEP	3H03710A	-	
146811-1	27	MOTOR ASSY, STEP	3H03169A	-	
	28	COVER	3H03289U	1	
152312	29	FILTER ASSY, A/C	2H02443J	-	
152311	30	FILTER ASSY	5231AR1143A	1	
159901	31	VANE HORIZONTAL	5990AR3298A	-	
			5990AR3544A	1	
159901-1	32	VANE HORIZONTAL	5990AR3297A	-	
			5990AR3583A	1	
135313	33	GRILLE ASSY, INLET	3530AR1129C	-	
			3530AR1319	-	
			5237AR1445B	1	
135312	34	GRILLE ASSY FRONT	3531AR1551	1	
			3531AR1552	-	
			3531AR1553B	1	

LS-D1863CL (Indoor Unit)

LOCATION NO.	No.	DESCRIPTION	PART No.	Q'TY	REMARKS
733010	1	PLATE ASSY, INSTALL	1H00843A	1	
149303	2	HOLDER TUBING	4930AR3309A	1	
346811	3	MOTOR ASSY, AC	4681AR2991B	1	
131410	4	CHASSIS ASSY	3141AR2393A	1	
	5	COVER TUBE	3H03652A	1	
359011	6	FAN ASSY, CROSS FLOW	5901AR2351E	1	
342800	7	BEARING	3H02821A	1	
354212	8	EVAPORATOR ASSY, FINAL	5421AR2464E	1	
W6711	9	REMOTE CONTROLLER ASSY	6711AR2664	-	
			6711AR2853	-	
			6711AR2852A	1	
266090	10	H.V ASSY	2Q01026C	1	
263230	11	THERMISTOR ASSY	6323AQ2333A	1	
268714	12	PWB(PCB) ASSY, MAIN	6871AQ2362D	1	
W6640	13	TERMINAL BLOCK	4H03048H	1	
W6640-1	14	TERMINAL BLOCK	4H03048K	1	
268712	15	PWB(PCB) ASSY, DISPLAY	6871AQ3029C	1	
			6871AQ3149A	-	
	16	CLAMP CORD	4H01051A	1	
			4H02958	-	
249940	17	CONTROL BOX, INDOOR	4994AR1513A	1	
268770	18	LEAD WIRE ASSY	6877AQ3207A	1	
261704	20	TRANSFORMER, POWER	6171AQ2147B	1	
264110	21	POWER CORD ASSY	3H02255Y	1	
			3H03462	-	
249951	22	CONTROL BOX ASSY, INDOOR	4781AR6040F	1	
135311	23	GRILLE ASSY, DISCHARGE	5009AR1176A	1	
			5009AR1385	-	
352150	24	HOSE ASSY DRAIN (INDOOR)	5250AR2044C	1	
	25	GEAR CASE ASSY	3H03716A	1	
146811	26	MOTOR ASSY, STEP	3H03710A	1	
146811-1	27	MOTOR ASSY, STEP	3H03169A	1	
	28	COVER	3H03289U	1	
152312	29	FILTER ASSY, A/C	2H02443J	OPTION	
152311	30	FILTER ASSY	5231AR1143A	1	
159901	31	VANE HORIZONTAL	5990AR3298A	1	
			5990AR3544A	-	
159901-1	32	VANE HORIZONTAL	5990AR3297A	-	
			5990AR3583A	1	
135313	33	GRILLE ASSY, INLET	3530AR1129C	1	
			3530AR1319	-	
			5237AR1445	-	
135312	34	GRILLE ASSY FRONT	3531AR1551B	1	
			3531AR1552	-	
			3531AR1553	-	

3828AR7190S

- 11 -

LS-D1863CM (Indoor Unit)

LOCATION NO.	No.	DESCRIPTION	PART No.	Q'TY	REMARKS
733010	1	PLATE ASSY, INSTALL	1H00843A	1	
149303	2	HOLDER TUBING	4930AR3309A	1	
346811	3	MOTOR ASSY, AC	4681AR2991B	1	
131410	4	CHASSIS ASSY	3141AR2393A	1	
	5	COVER TUBE	3H03652A	1	
359011	6	FAN ASSY, CROSS FLOW	5901AR2351E	1	
342800	7	BEARING	3H02821A	1	
354212	8	EVAPORATOR ASSY, FINAL	5421AR2464E	1	
W6711	9	REMOTE CONTROLLER ASSY	6711AR2664	-	
			6711AR2853	-	
			6711AR2852A	1	
266090	10	H.V ASSY	2Q01026C	-	
263230	11	THERMISTOR ASSY	6323AQ2333A	1	
268714	12	PWB(PCB) ASSY, MAIN	6871AQ2362D	1	
W6640	13	TERMINAL BLOCK	4H03048H	1	
W6640-1	14	TERMINAL BLOCK	4H03048K	1	
268712	15	PWB(PCB) ASSY, DISPLAY	6871AQ3029C	-	
			6871AQ3149A	1	
	16	CLAMP CORD	4H01051	-	
			4H02958A	1	
249940	17	CONTROL BOX, INDOOR	4994AR1513A	1	
268770	18	LEAD WIRE ASSY	6877AQ3207A	1	
261704	20	TRANSFORMER, POWER	6171AQ2147B	1	
264110	21	POWER CORD ASSY	3H02255	-	
			3H03462C	1	
249951	22	CONTROL BOX ASSY, INDOOR	4781AR6040N	1	
135311	23	GRILLE ASSY, DISCHARGE	5009AR1176	-	
			5009AR1385A	1	
352150	24	HOSE ASSY DRAIN (INDOOR)	5250AR2044C	1	
	25	GEAR CASE ASSY	3H03716A	1	
146811	26	MOTOR ASSY, STEP	3H03710A	1	
146811-1	27	MOTOR ASSY, STEP	3H03169A	1	
	28	COVER	3H03289U	1	
152312	29	FILTER ASSY, A/C	2H02443J	OPTION	
152311	30	FILTER ASSY	5231AR1143A	1	
159901	31	VANE HORIZONTAL	5990AR3298A	-	

			5990AR3544A	1	
159901-1	32	VANE HORIZONTAL	5990AR3297A	-	
			5990AR3583A	1	
135313	33	GRILLE ASSY, INLET	3530AR1129	-	
			3530AR1319S	1	
			5237AR1445	-	
135312	34	GRILLE ASSY FRONT	3531AR1551	-	
			3531AR1552	2	
			3531AR1553	-	

3828AR7190S

- 12 -

Page of 127 Display 

Download LG LS-D2462HL Service Manual (Repair Manual)

Here you can view online or download **LG LS-D2462HL Service Manual** in pdf.

This Service Manual can help you recover, restore, fix, disassemble and repair LG LS-D2462HL Air Conditioner.

Information contained in LG LS-D2462HL service manual (**repair manual**) typically includes:

Disassembly, troubleshooting, programming, maintenance, remote, adjustment, installation and setup instructions.

Schematics, wiring and block diagrams.

Printed wiring boards (PWB) and printed circuit boards (PCB).

Parts list (bill of materials).

RANDOM:

KV-C2569D

AR-PK4 (serv.man27)

MX-5500N, MX-6200N, MX-7000N (serv.man120)

CREATURE III (serv.man6)